


MANZANITA MICRO

Rudman Regulator Mark 3x4SMT Digital Lithium Ion BMS

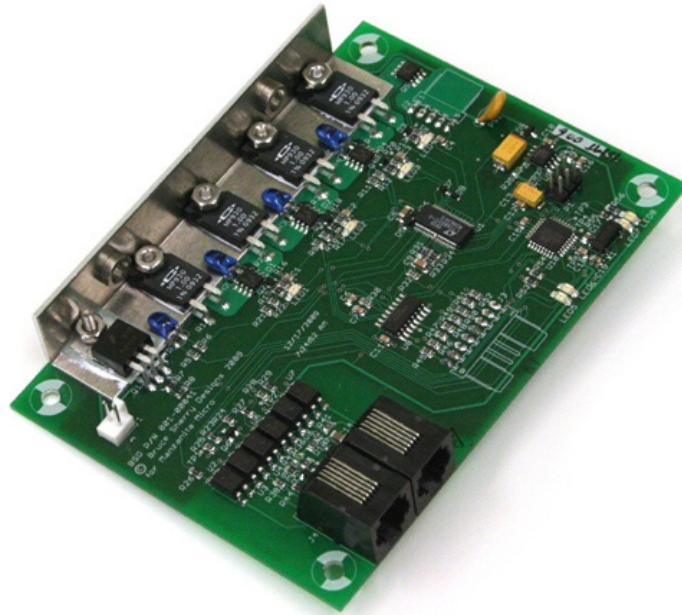

Owner's Manual

Rev 1.5

©2012 Manzanita Micro LLC
The information date is: February 13, 2012

CONTENTS

| | |
|---|---------|
| GENERAL OVERVIEW..... | Page 3 |
| DIMENSIONS AND SPECIFICATIONS..... | Page 4 |
| KEY FEATURES LIST..... | Page 5 |
| OPERATION..... | Page 6 |
| - Photo of BMS Board Face With Callouts..... | Page 6 |
| - LED Indicator Guide..... | Page 6 |
| - Dissipation Heat Sink..... | Page 7 |
| - Built in Fuse..... | Page 8 |
| - Connections..... | Page 8 |
| THE REGBUS INTERFACE..... | Page 10 |
| -Pinout Description..... | Page 10 |
| BMS INSTALLATION..... | Page 12 |
| WIRING THE MANZANITA MICRO MK3x4SMT BMS..... | Page 12 |
| - Voltage Sense Wiring..... | Page 12 |
| - Temperature Sense Wiring..... | Page 13 |
| - Reg Bus wiring..... | Page 13 |
| - Reg Bus Cable Construction..... | Page 14 |
| CONNECTING WITH THE DIGITAL INTERFACE..... | Page 16 |
| - Connecting with a Laptop or Windows Based Computer..... | Page 16 |
| - Dongle / Terminator (DT) Box..... | Page 17 |
| REGULATOR ADJUSTMENT AND COMMANDS..... | Page 18 |
| - Command Usage and Document Conventions..... | Page 18 |
| - Commands List..... | Page 19 |
| - Detailed Description of Each Command..... | Page 20 |
| MANZANITA MICRO CONTACT INFO..... | Page 27 |



ATTENTION! ELECTROSTATIC SENSITIVE DEVICES!

Don't ship, or store near electrostatic, magnetic, electromagnetic, or radioactive fields! Static electricity can produce high voltages which can damage sensitive electronics in this product. Damage due to negligent handling and static *may not be covered under your warranty*.

TIPS TO PREVENT ESD DAMAGE: Avoid contact with any of the components on the product circuit boards. It is best to hold the PCB only by the edges much like you might handle a record or compact disc. When working with the PCB it is best to have an appropriate anti-static mat and wear a properly grounded wrist strap. In the absence of proper equipment the risk is much higher but other precautions may be helpful. Keep your work area clean and especially be cautious of static inducing objects such as plastic desk accessories, wastebaskets, telephones and computers. Avoid shuffling or rubbing against things and avoid using rolling chairs.

Mk3x4SMT Digital BMS For 4 Lithium Cells

General Overview


The Mk3x4SMT Digital Lithium Regulator is a feature rich battery management board capable of individual voltage and temperature monitoring and equalization of up to 4 cells. Each Mk3x4SMT is less than 1 inch tall and has a footprint of only 3.5 x 5 inches yet they have incredible dissipation capacity for quick cell equalization. Furthermore, they have simple RJ reg bus data ports for quick and easy communication back to any Manzanita Micro Charger.

When lithium cells are connected in series, even if they are closely matched when new, over time their exact capacities and voltages will drift apart. With sealed lithium ion batteries permanent capacity loss can result if cells are overcharged to the point of venting. Furthermore, with some lithium polymer batteries as well as certain other chemistries, thermal runaway or explosion can occur if there is no intelligent BMS to keep the cells in their safe operational range. The intent of the Mk3x4SMT regulator is to bypass current around a fully charged lithium cell so that all the other cells in a long series string can get fully charged without any one becoming overcharged. This is accomplished with individual Mk3x4SMT circuit boards attached to each group of 4 cells in a battery pack. These boards are able to sense the voltage across the cell and turn on a bypass resistor to bypass current around the cell instead of going through it. Each of the 4 circuits has a blink feature that changes duty cycle in response to the needs of the individual cell allowing the user to see what is happening.

When using the regulators in conjunction with an appropriate charger, it is possible to charge and equalize the batteries very quickly without worrying about damaging them. Fast, full charges coupled with individual cell equalization means less down time, more range per charge, better battery health and longer lifespan.

The digital communication bus allows for detailed continuously updating battery and BMS data display using a Windows based PC and the Manzanita Micro software which is available for free from www.manzanitamicro.com. Anyone with a PC, a USB port, the dongle / terminator box and the software can view text based battery and BMS information. This information includes up to 4 individual cell voltages (or the total block voltage for that unit using "Querytot" command), individual cell temperatures (with up to 4 user installed temp sensors), regulator internal (heat sink) temperature and other information. The rest of this manual details these features as well as how to change settings.

Dimensions and Specifications

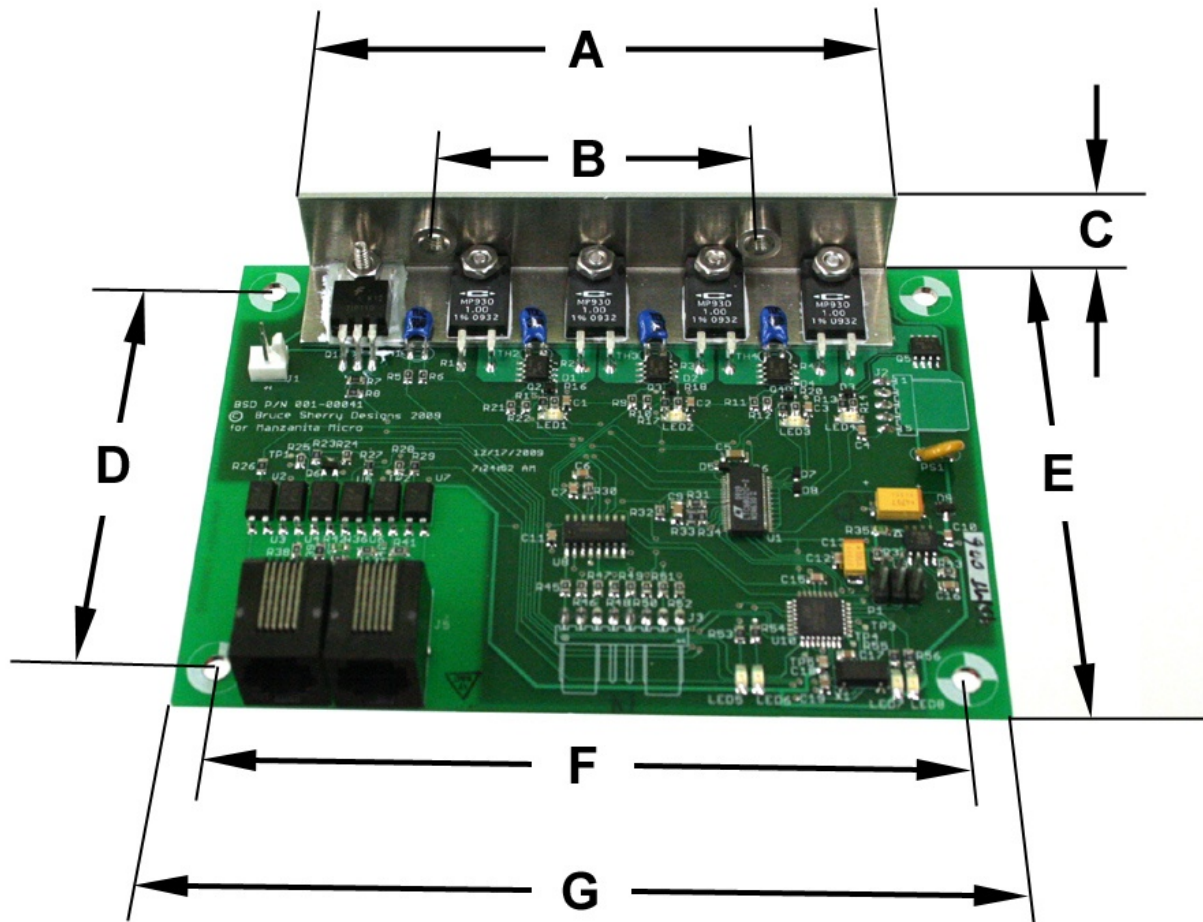

The Mk3x4SMT Digital Lithium BMS units weigh 2.7 ounces (76.5 grams)

Approximate dimensions are as follows:

- A : Angled heat sink mount total width.....4 inches (101 mm)
- B : Distance between heat sink mounting holes.....2 & 3/8 inches (56 mm)
- C : Height at highest part of the unit.....7/8 of an inch (22 mm)
- D : Distance between hole centers on the side.....3 inches (76 mm)
- E : Width of unit.....3 and 1/2 inches (89 mm)
- F : Distance between hole centers on the long side.....4 and 1/2 inches (116 mm)
- G : Length of unit.....5 inches (127 mm)

The Mk3x4SMT name signifies Mark 3 edition BMS (digital) with 4 channels (for 4 cells) and surface mount hardware. All Mk3x4SMT systems are calibrated and fully tested before leaving Manzanita Micro.

MARK 3X4SMT DIGITAL LITHIUM ION BMS KEY FEATURES

- Real time voltage monitoring of 4 lithium cells
- Real time temperature sensing of up to 4 external temp sensors
- Additional temperature sensor included on BMS module's heat sink
- Small size is less than 1 inch thick and 5 inches long by 3.5 inches wide
- Quick automatic cell equalization and balancing with high and low voltage on board indicators and outputs to the charger
- Two high speed real-time warning lines which can be relay buffered for external use
- All BMS modules connect together using readily available RJ cable
- BMS easily connects to a PC using the included USB adapter
- Includes free Windows based scanner and command software
- All commands are easily entered and read in simple ASCII text
- Easy user adjustable min and max voltage parameters allow flexibility for various types of lithium cells from 1.75 to 5.5 volts per cell
- Each BMS board can bypass up to 2.5 amps per cell channel (10A total) equating to fast charging and equalization of unbalanced cells
- Dual RJ reg bus ports for easy connection to the charger or other BMS units in a simple daisy chain fashion
- Self regulating thermal protection and feedback to Manzanita Micro Chargers
- Built-in active variable speed 12V DC fan control output on each BMS unit. The fan settings can be viewed and changed using the included software
- Large heat spreader is totally isolated from the cells and is already threaded for easy mounting to a larger heat sink.
- Each unit can dissipate up to 90 watts

Mark 3x4SMT Lithium BMS Operation

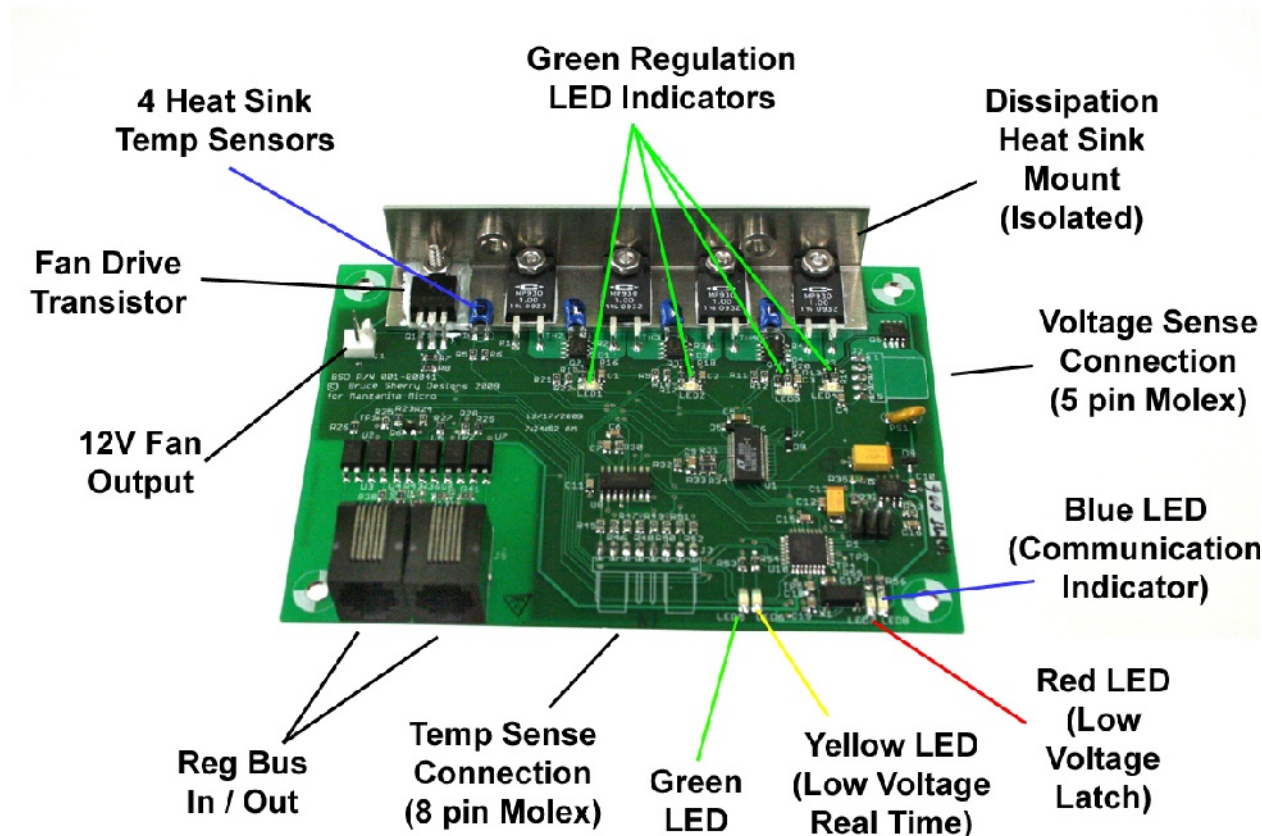


figure 02

Indicators:

There are eight LED indicators on a fully populated Mk3x4SMT regulator. When the regulator is first connected to 4 cells, the green, yellow, red and blue LEDs in the lower right hand corner will illuminate briefly to let the user know that they are all functioning.

5 Green LEDs – “Regulation Indicators”

The five green LEDs indicate that the BMS unit is regulating. Each of the four LEDs in the middle of the board correspond to their own independent dissipation channels. They come on when the cell they are attached to is above the regulation set point and the dissipation load is activated. The fifth green LED which is next to the yellow LED, blinks any time any of the 4 cells are at their upper regulation voltage limit. This is a brief transient event at first with a brief blink followed by a much longer off time. As the cell becomes more fully charged, the on time increases and the off time decreases, thereby increasing the bypass current through the regulator and preventing the battery

from being overcharged. So, the faster the individual green LED blinks, the more fully charged that cell is. The set point voltage controls the voltage level when this regulation occurs. On a Mk3x4SMT, this set point for the high voltage limit is preset to 3.8 Volts per cell before being shipped from Manzanita Micro. This set point can be adjusted by communicating with the regulator from a computer via a USB cable and the DT box. The high and low set points can be adjusted in 0.024 volt increments. For more information on this procedure, see the “Adjustments” section later in this manual.

NOTICE! If any green LED stays on steady this means that at least one of the channels in the BMS unit is regulating at full bore. If this happens frequently the charger should be turned down or the regs need more cooling. When the reg bus is connected to a Manzanita Micro battery charger and a green LED remains steady on one or more regs, the charger should cut back or shut down automatically as necessary. In this case the blue “Timer” LED on the charger will also illuminate.

Yellow LED – “Undervoltage Real-time”

The yellow LED indicates that one or more of the cells in the string is/are currently below the undervoltage set point. This can indicate a discharged cell, a bad cell or a damaged BMS unit.

The undervoltage set point on a Mk3x4SMT BMS unit is preset to 2.5 Volts per cell before leaving Manzanita Micro. This set point can be adjusted by communicating with the unit from a computer. For more information on this procedure refer to the “Adjustments” section later in this manual.

NOTICE! When many BMS units are connected together to monitor a pack of batteries if one unit detects an undervoltage condition with any one of its cells and illuminates its yellow LED, this will trigger all of the regulators to illuminate their yellow LEDs. In this case, one must look for the regulator with the red LED to find the offending battery.

Red LED – “Undervoltage Latch”

The red LED indicates that one or more of the cells attached to that reg has/have gone below the undervoltage set point at some point since it was last brought to a full charge. The red LED will remain lit until either the power is disconnected from the regulator or the battery is fully charged and all 4 green cell channel LEDs blink. This feature lets the user quickly spot the weakest batteries in the pack even if some of the individual cells are currently not below the undervoltage set point.

Blue LED– “Communication Indicator”

The blue LED indicates when the regulator is communicating on the Rudman Bus. All of the blue LEDs should blink in sequence whenever an external device is communicating with a string of regulators and going through each valid bus address. The blue LED will illuminate whenever the unit is being communicated with.

Dissipation Heat Sink Mount:

The 'L' shaped aluminum heat sink mount is the area on the BMS unit where energy is bypassed around a cell and dissipated as heat. The high amount of dissipation capability sets the Manzanita Micro BMS apart from the competition and allows for maximum battery balancing in a short amount of time. When the unit's heat sink temperature becomes too high, the unit automatically tells the charger to cut back via the reg bus data cable system. Bolting the BMS unit to a larger heat sink and/or adding a cooling fan will allow for higher performance and faster equalization.

NOTE: The angled aluminum mount alone is not designed to take all of the heat that the BMS unit is capable of generating so it is important to mount this to a larger heat spreading piece of aluminum or copper. A 3/4" x 3/4" piece of aluminum square tube is a fine solution especially with a fan blowing through the tube.

The thermal threshold temperature for the heat sink is normally set to 180 degrees Fahrenheit upon leaving Manzanita Micro. This threshold can be changed in order to push the regulators harder, but be aware that higher heat sink temperatures may shorten the life of the regulator. For more information see the "Adjustments" section later in this manual.

WARNING! NEVER touch any of the heat sink mounts while the cells are being charged! As the name implies, the heat sink mounts get HOT. Temperatures can be as high as 180°F (82.2°C) and they can cause burns if touched while they are hot.

Built In Fuse:

Each MK3x4SMT BMS unit has a built-in individual poly fuse designed to prevent damage to the reg under certain circumstances. The poly fuse is rated to 50 milliamps. Damage will occur if there is ever more than 35 volts placed across the unit.

NOTICE! The poly fuse WILL NOT protect the unit from reverse polarity or incorrect wiring to the cells! If the reg frequently trips the poly fuse, figure out the problem or contact a qualified service technician or Manzanita Micro.

Connections:

J2 – Voltage Sense/ Cells Connection

J2 is the Molex 5-pin voltage sense connection which connects each individual cell to its respective BMS channel. The Molex part number for the required female connector plug is: 22-01-3057 and the Molex pin p/n is: 08-50-0114. For further instructions refer to "Wiring the Mk3x4SMT BMS" in the Installation section of this manual.

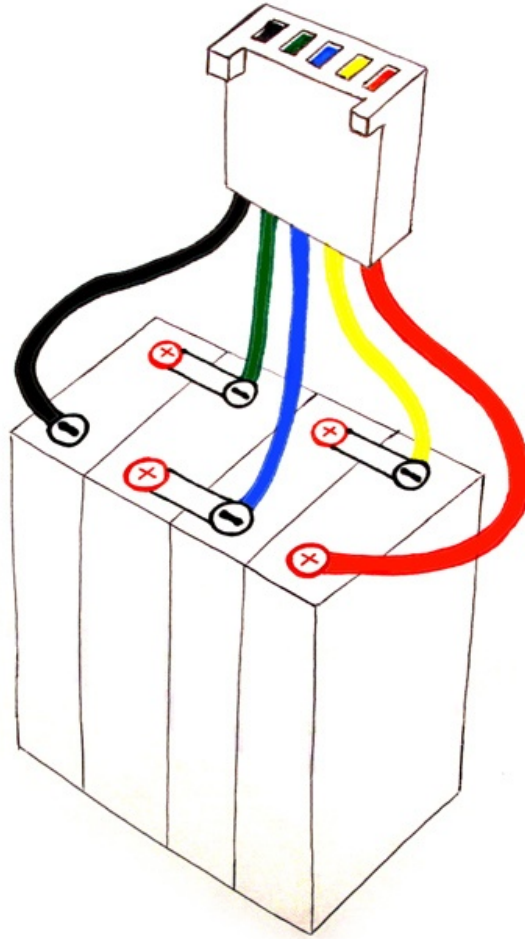


figure 03 : Five Pin Molex Voltage Sense Wiring (larger-than-life to show detail)

J1 – External Fan Connection

J1 is the 2-pin Molex plug in the upper left corner of the PCB near the heat spreader. This provides power to drive an external 12 volt fan. The part number for this connector plug is: 22-01-3027. Red and black 22 awg stranded hook up wire is recommended. Crimp on the Molex end pins (p/n: 08-50-0114) and insert them into the connector plug until they latch. The red positive wire should be inserted into the RIGHT side of the Molex connector so that it is on the side nearest to the reg bus RJ ports on the BMS unit.

CAUTION: Do not short out these pins as they can have 12 volts potential between them at any time. Also when an external fan or fans are hooked up to this connection be aware that it/they may turn on and off at any time.

The external fan uses PWM control allowing 8 different fan speeds (1-9) and an automatic mode (O). For more information on controlling an external fan, refer to the 'Fan' command description on page 21 of this manual.

J3 – Four Channel 8-pin Molex Temperature Sense Connection

J3 is an 8-pin Molex connection which allows up to 4 individual temperature sensors to be connected to the BMS unit. These external temperatures can then be displayed on any laptop or computer running the supporting software. These external temperature sensors will be in addition to the unit's own internal heat sink temperature readout. The Molex part number for the required 8-pin female connector plug is: 22-01-3087 and the pin p/n is: 08-50-0114. For proper temperature sensor wiring order the sensors from Manzanita Micro or refer to "Wiring the Mk3x4SMT Regulators" in the Installation section of this manual. Figure 04 below shows a properly constructed temperature sense harness.

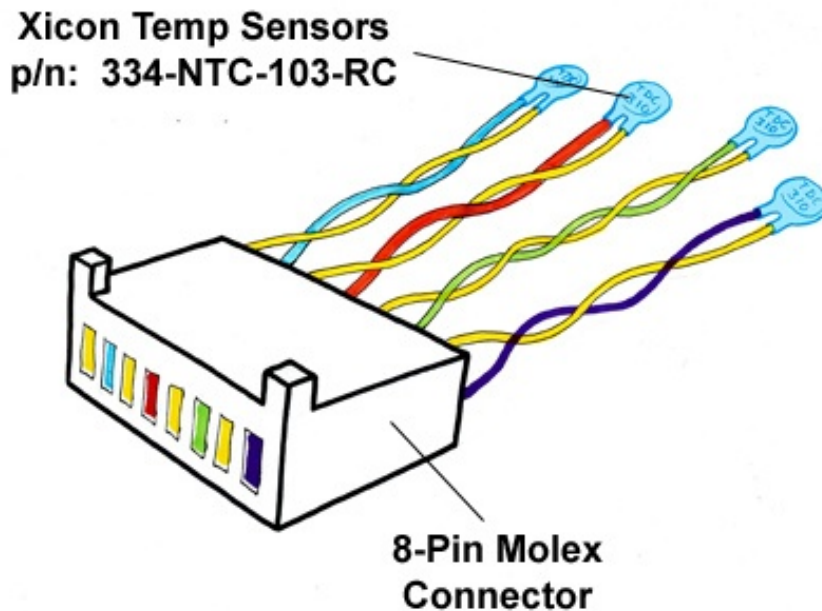


Figure 04 : 8 Pin Molex Temp Sensor Wiring

P1 – Programming Header

P1 is the 6 pin JTAG programming header. This is where the chip programmer is attached in order to load the firmware when the regulator is initially programmed at Manzanita Micro. Users should never attempt to attach anything to this header.

J4 and J5 – Regbus I/O RJ Connections

J4 and J5 are the 'In' and 'Out' ports for the reg bus communication line. These are standard 6 pin RJ data connections. The Mk3x4SMT units are to be connected to each other in a daisy chain fashion. The precise order does not matter as each unit is individually programmed with a specific bus address identification number that does not change. The dongle terminator (DT) for the Manzanita Micro Regscanner or a laptop can be plugged into the same RJ connection at either end of the chain to read information and send commands to the BMS units over the Rudman Bus. More information on that is contained in the next section.

The REGBUS interface:

The REGBUS communicates important information back to the charger such as whether any regs are regulating or not and whether any heat sink channels are too hot. The charger uses this information to determine when to turn down the charge current and when to turn off the charger. In addition, the REGBUS also transmits the digital information to the terminator and dongle can have a computer hooked up to it in order to view and/or change information from the BMS.

The REGBUS interface contains five wires connected as follows:

1. Power supply (+5 volt DC)
2. Reg overvoltage condition (reg ON or reg hot) – +5V on this line when active
3. Undervoltage condition – 0V on this line means undervoltage active
4. Power supply return Ground (GND)

CAUTION: The GND return is NOT isolated on older Manzanita Charger models.

5. Rudman bus negative
6. Rudman bus positive



figure 05

Note: The pin count reads from left to right when looking straight on into the RJ receptacle (see figure 05) Or, when looking at the bottom of the board, pin #1 is the square pin.

All of these wires are isolated from the battery being monitored to prevent faults. The opto-isolator components keep local Batt POS and Batt NEG isolated from the charger's Batt POS and Batt NEG. The +5 and GND are powered from a 150 mA DC/DC converter. All measurements are made relative to the GND wire. It is important to verify all six of the wires are continuous throughout the system. **On older PFC charger models, the GND line on the REGBUS is not isolated from the main**

battery negative.

The primary functions of the REGBUS are:

1. Supply power to the charger side of the BMS units
2. Support analog data exchange from BMS to charger and real-time analog control
3. Support digital data transfer and control of BMS via the Rudman Bus (modified EVILbus)

Optimally, the charger will run at full current until the first regulator gets hot, then it will cut back to save that regulator and also start the countdown timer. With new sets of cells, it can take several hours for the pack to go from the first cell to top off until the last one tops off. This is especially true if the cells were manufactured at different times. As more charge and discharge cycles are performed, the cells in a pack will become more closely synchronized and the equalization time will be much quicker. As the cells near the end of their useful life, the time to equalize usually gets longer and longer as some cells begin to perform more poorly than others.

How hot to run the regulators during the absorption phase is a function of the ambient temperature, and how fast the vehicle needs to get back into service. Higher temperatures will make the absorption phase take less time but is more risky to the regulators. When the upper thermal threshold on a regulator has been reached, the blue and red LEDs will illuminate and the reg will pull the hot reg line to +5 volts. This will tell the charger to stop charging until the temperature of the heat sink drops below the thermal limit. Adding airflow across the regulators will dramatically help cooling the regs and speed up charge equalization.

BMS Installation:

The Mk3x4 SMT BMS units have 2 mounting holes with threaded inserts. These mounting points are spaced approximately 2.375 inches apart on the back side of the long angled aluminum heat spreader. It is recommended that the units are mounted to a larger heat sink or piece of aluminum or copper. The dissipation resistors and the fan drive transistor are isolated from the heat sinks.

Wiring the Mk3x4SMT BMS:

Voltage Sense Wiring:

Battery wires to the BMS units should be kept as short as possible. Each Mk3x4SMT BMS unit needs only 5 cell connection wires to monitor a block of 4 cells. Refer to the wiring illustration shown in figure 03 in order to assure proper wiring. Five different colors of wire are recommended in order to color code for ease and accuracy of cell wiring.

Manzanita Micro recommends using 22 gauge stranded hookup wire in black, green, blue, yellow, and red. Be sure to check that each wire goes into the 5-pin Molex connector (p/n: 22-01-3057) exactly as shown in the wiring diagram figure 03. Once

safely inside the connector, the other end of each wire can go to the appropriate connection between the cells. When wired as shown in the diagram, the cell voltages will be in the correct order.

The part number for the Molex connector pins is: 08-50-0114. Crimp the Molex connector pins and insert them into the connector plug until they latch. The other ends of the wires connect to the cells. Simply attach an appropriately sized ring terminal and bolt the terminal onto the cells placing it on top of the lug or bus bar. The red wire is attached to the positive terminal of the most positive cell (usually referred to as cell # 1) in the group of 4 cells. The black wire is the most positive wire so it is connected to the most negative terminal of the last cell in the group of 4 cells (usually referred to as cell # 4). The other wires connect in order at each interconnect point between the cells as shown in figure 03.

CAUTION! In order to lessen the risk of fire or shorting ALWAYS finish connecting all of the wires into the Molex connector before connecting the ring terminal ends to the battery cells!

Temperature Sense Wiring:

Temperature sensor wires must be twisted pairs and should be kept to 18 inches or less. The Mk3x4SMT regulators use 4 pairs of wires to monitor up 4 external temperature sensors. Manzanita Micro recommends using 22 guage stranded hookup wire. Be sure to check that each wire goes into the 8-pin Molex connector exactly as shown in the drawing in figure 04. Crimp the Molex end pins onto the wires and insert them into the connector plug until they latch. Each pair should be placed exactly like the drawing so that there are 4 pairs right next to each other. In order to easily distinguish the sensors from each other it is recommended to use at least one different color wire for each channel. Solder a wire to each temperature sensor lead and cover the exposed joint with heat shrink. The temperature sensors are not polarity sensitive so it does not matter which side the the wires go to. The temp sensors are Xicon thermistors. These are available from Mouser. The P/N is: 334-NTC103-RC.

Reg bus Wiring:

All MK3x4SMT BMS units are connected with a 6 pin RJ data cable allowing them to communicate back to the charger. These communication lines connect all of the BMS units in a daisy chain fashion.

Regbus Cable Construction:

The 6-wire RJ cable which is used to connect the regulators is a common data transfer cable and is available at most electronics stores. The 6-pin connector plugs are usually clear and it is easy to crimp them using an appropriate crimping tool with a 6-pin die. These are also readily available.

NOTICE! RJ cable is quite rugged but take care not to cut or sharply bend or fatigue the

cable in order to avoid errors from broken internal wires. Additionally, follow the proper cable construction techniques listed below and make sure that all the wires are installed in the correct orientation. (See figure 06)

Proper Regbus cable construction is not difficult but it requires keen attention to detail on the part of the person installing the plug ends onto the RJ cable. The following steps tell how to correctly make a regbus cable suitable for use with any 6-Pin Manzanita Micro product.

Step 1: Cut the RJ cable to the desired length. (It is advisable to err on the long side because each of the cable's ends will be pushed to the back of their respective RJ receptacles.

Step 2: Strip about a quarter inch of the thick "flat" outer jacket off of each end of the cable in order to expose the 6 colored wires inside. Most RJ crimping tools will have a special wire stripping section with a guide which will allow you to quickly strip the correct length of cable jacket off.

Step 3: Hold the flat RJ cable in front of you in your left hand with one end pointing towards you and one away from you.

Step 4: Looking down at the cable in your hand make sure that the end facing away from your body has the **blue wire to the right** side.

Step 5: Now take an un-crimped plug-end in your right hand and with the tang oriented on the bottom side, slide the outward facing end of the flat RJ cable into the slot in the un-crimped plug. Make sure it is not crooked and push it all the way into the un-crimped plug. (see figure 06)

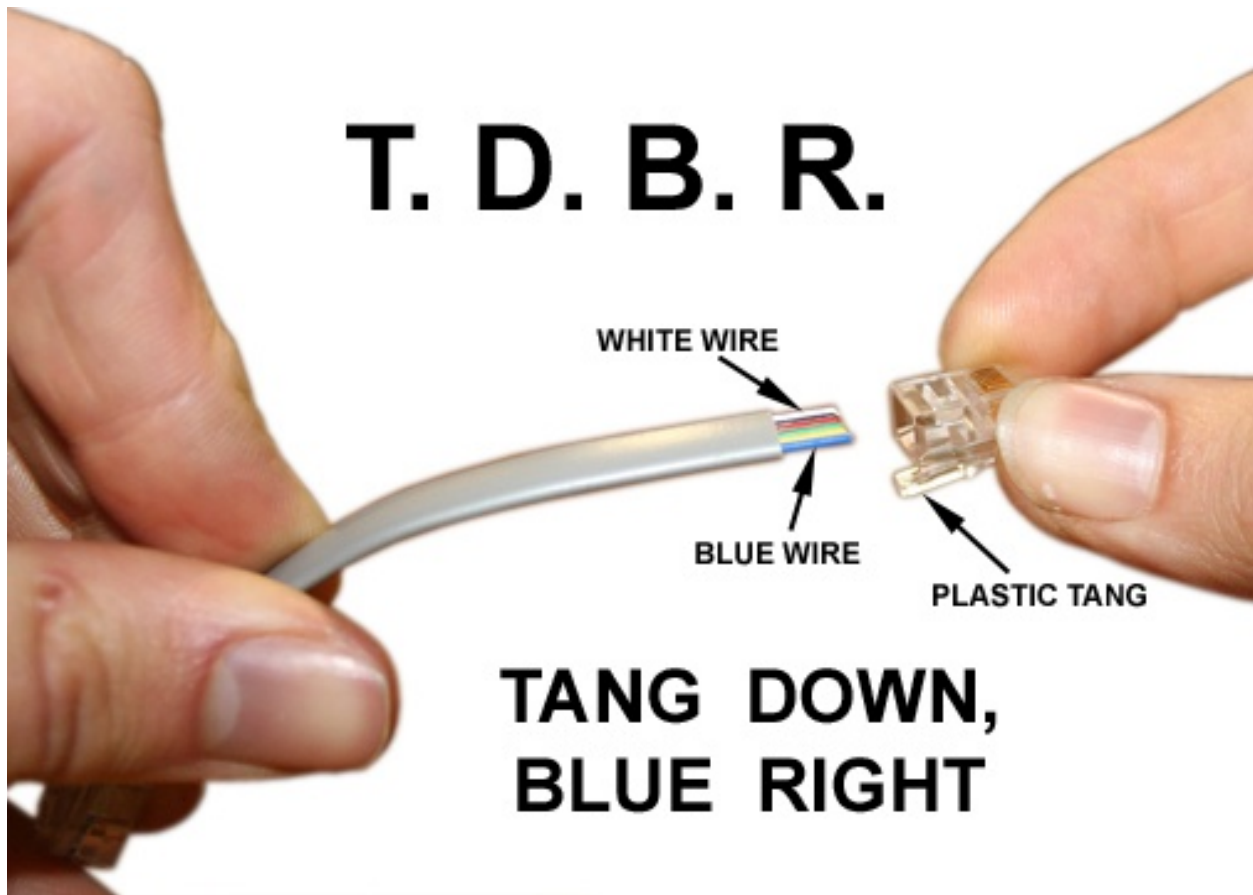


figure 06

Step 6: Double check that the **blue wire is to the right** side with the tang down and then take the RJ crimping tool in your right hand. With your left hand push the cable with un-crimped plug into the 6-pin die on the crimping tool.

Step 7: While using your left hand to make sure that the RJ cable is firmly held all the way into the connector, squeeze the crimping tool with your right hand and complete the crimp.

If you have a clear plug-end, you can look in and make sure that each of the 6 metal pins sunk all the way down into their respective wires. Give the connector a slight tug to make sure that it is adequately fastened and now you have created a proper RJ cable end.

Follow the same steps on the other end of the cable and you are done. **NOTE!** When crimping the second end of the cable, notice that you'll have to flip it over in order to **again orient the blue wire to the right when the connector tang is facing down.** (see figure 07)

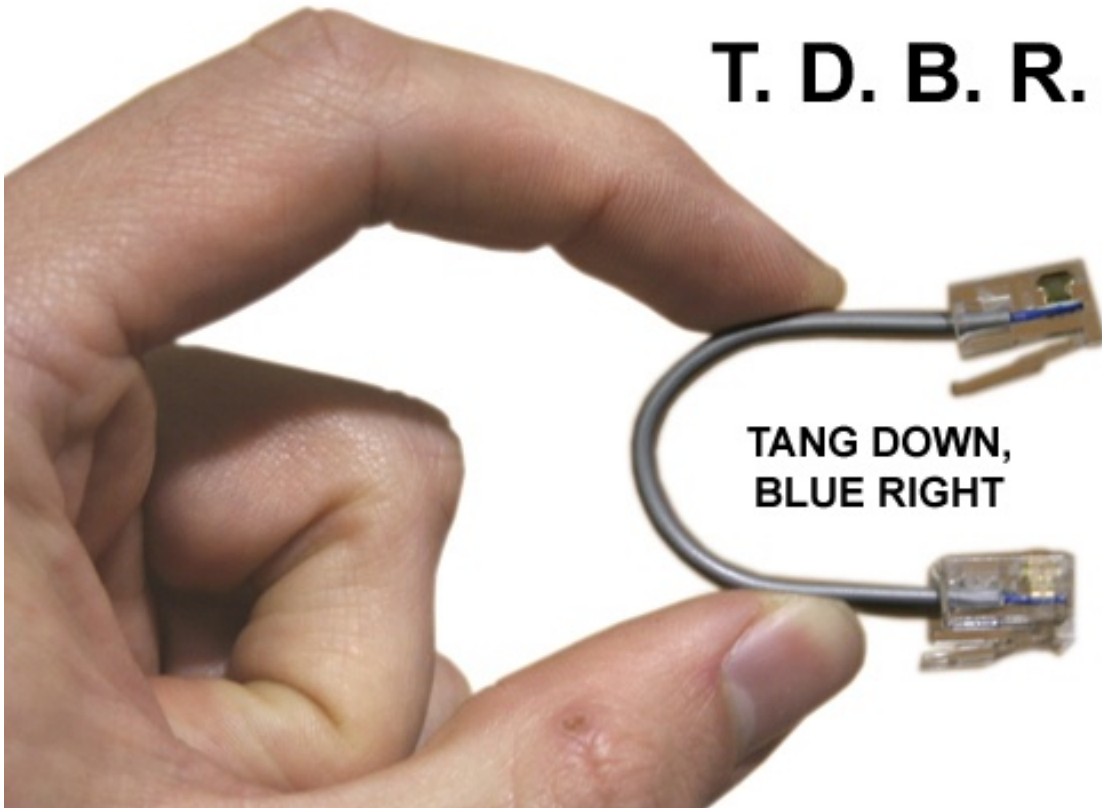


figure 07

Connecting With the Digital Interface

Connecting With a Laptop or Other Windows Based Computer

Any computer with a USB port and running Windows can plug into the regbus using a Manzanita Micro dongle / terminator box. These items in conjunction with the Manzanita Micro software, will allow you to view regulator data and send commands using a text based program. The software is available for free from the download section at: www.manzanitamicro.com

Simply open the file and follow the simple setup wizard to install the program on your computer. Once installed, open the program and if the regs are properly connected through dongle / terminator and you should be able to read information from them. More specific instructions for the application can be found in the README file included with the software itself. Details on hooking up the dongle / terminator (DT box) are in the section below

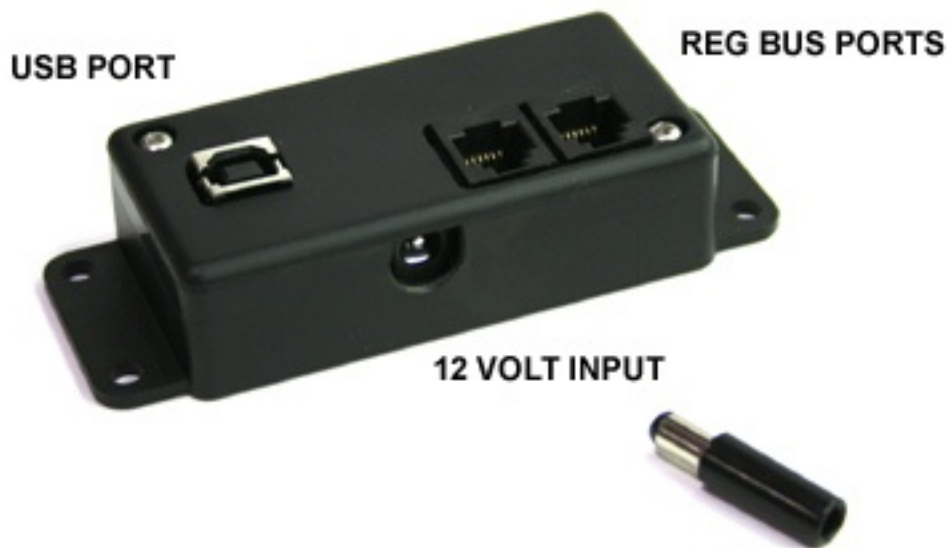


figure 08

Dongle Terminator Box (DT Box)

The dongle / terminator box is a black adapter box with a USB plug which plugs into the computer that will be used to communicate with the Mk3 regulators using the Rudmanbus system

The other end of the dongle has two RJ jacks which allow it to be connected with cables to the reg bus system. The reg bus alone will not function correctly without a supply of 12v power. The new DT box receives its power from the USB plug itself. On older models there is actually a separate 12 volt power jack (as in figure 08). The center pin requires +12 volts and is a 2.1mm post.

NOTE! Communication over the digital Rudmanbus will not be possible if the DT box is not receiving a solid 12 – 15 volts.

Regulator Adjustment and Commands

Using Commands

Unlike the old analog Rudman Regulators, the Mk3x4SMT regs do not require adjusting potentiometers in order to change voltage settings. Instead, the Mk3x4SMTs can be calibrated, asked to feedback information or have settings (such as voltage limits) and changed using simple ASCII commands. Each reg can be talked to individually by using its specific bus address. Some commands can be sent to all regs at once by entering a bus address of 99. This is useful for commands like clearing history, or setting all of the voltage limits.

The first two bytes are the devices bus address in ascii decimal (ie: 00 to 99). These are followed by the specific command to be executed.

To ask for regulator #1s battery voltage reading the command would be: "01voltage" and then hit the return key.

To ask for regulator #7s battery voltage reading the command would be: "07voltage" and then hit the return key.

Document Conventions

Again, ASCII numbers from 000 to 999 are valid device bus addresses. Address 99 is reserved for an all device broadcast, which is only valid for settings such as minvolts, maxvolts, hstclear, etc.

The bus address is a string of decimal digits, and is always in the range 0 to 255 inclusive. Leading zeroes are allowed. When the regulator replies with a bus address, it will always send two or three digits. E.g.: 01, 099, or 200.

A broadcast command is one that responds to the broadcast address. The broadcast address is a single asterisk, i.e.: "*" or "99".

NOTE: The latest version of the regulator supports the two digit bus address 99 as the broadcast address. To use 99 as a bus address that does not mean broadcast, but instead exactly one bus address, specify at least one leading zero. E.g.: 099.

A broadcast command will not reply with any report or status. *commandl* is the only exception to this rule, however *commandl* should never be invoked with the broadcast address.

A descriptive word representing one field will be set off in <angle brackets>. The brackets are not included in the actual command. E.g. <addr> may be replaced by 1, 2, 99, etc. An optional field will be set of in [square brackets]. The brackets are not included in the actual command. E.g. [<voltage>] may be replaced by 2.500 or left empty. Commands may be specified using their full syntax, abbreviated to their minimum syntax, or anything in between. An abbreviated command ends with a period "." A command that takes an argument after the command must end with a single period, whether or not it is abbreviated. All commands must be in lower case letters. E.g. 1e. but not 1E.

NOTICE! The commands *will not* work if there are any uppercase letters used. All letters must be entered in lowercase characters only!

Commands List

This list of commands is current as of August 24, 2010.

changead
changesn*
commandl
debug*
disable
enable
fan
gethighv
hmaclear
hmiclear
hstclear
lights
maxvolts
minvolts
numchan*
querytot
readlowv
sethigh
setlow
setover
status
temperat
tempwarm
temphigh
tempoff
voltage
xtrntemp

NOTE: Commands marked with an asterisk are not available on production units.

NOTICE! The commands *will not* work if there are any uppercase letters used. All letters must be entered in lowercase characters only!

changead (ch.)

Full Syntax: <addr>changead.<newaddr>

Minimum Syntax: <addr>ch.<newaddr>

Broadcast Command: No

Example:

Command: 1ch.9

Reply: 01 Now:09

changead. changes the current bus address <addr> to the new address <newaddr>.

The other bus addresses on the same regulator are adjusted respectively.

The new address must always be from 0 to 255. Additionally, the new address must not force any other bus address on the same regulator to exceed 0 to 255.

*** changesn (changes.)**

This command is not available on production units.

Full Syntax: <addr>changesn[.<level>]

Minimum Syntax: <addr>changes.[<level>]

Broadcast Command: Yes

Example:

Command: 1changesn.100

Reply:

--Rudman MK3x4SMT Regulator

--V0.17 Unit:01-08 S/N: 00100

commandl changead disable enable

fan gethighv hstclear hmaclear

hmiclear lights minvolts maxvolts

querytot readlowv status sethigh

setlow setover temperat tempwarm

temphot tempoff voltage xtrntemp

changesn changes the internal serial number.

commandl (.)

Full Syntax: <addr>commandl

Minimum Syntax: <addr>.

This command is handy for visually locating regs as it will make the unit's lights flash.

Broadcast Command: Yes, but only supported on a single regulator system.

NOTE: Only use this command to talk to one individual regulator at a time. Do not use as a broadcast command (ie: 99) if there is more than one Mk3x4SMT regulator in the system. Additionally, do not use this command if there are any Mk3x4 four channel regulators in the system.

Example:

Command: 1.

Reply:

--Rudman MK3x4SMT Regulator

--V0.17 Unit:01-08 S/N: 00001

commandl changead disable enable
fan gethighv hstclear hmaclear
hmiclear lights minvolts maxvolts
querytot readlowv status sethigh
setlow setover temperat tempwarm
tempshot tempoff voltage xtrntemp

commandl lists the valid commands, the version number, bus address range, and serial number. Although commandl is a broadcast command, it will generate garbage data on a system with more than one regulator.

The <addr> is not used in the command, but serves to ensure only one regulator responds.

debug (de.)

This command is not available on production units.

Full Syntax: <addr>debug[.<level>]

Minimum Syntax: <addr>de.[<level>]

Broadcast Command: Yes

Example:

Command: 1de.

Reply: 01DEBUG 0

debug controls debug mode. <level> 0 is production mode.

disable (d.)

Full Syntax: <addr>disable

Minimum Syntax: <addr>d.

Broadcast Command: Yes

Example:

Command: 1d.

Reply: 01Disable

disable disables the ability to shunt.

enable (e.)

Full Syntax: <addr>enable

Minimum Syntax: <addr>e.

Broadcast Command: Yes

Example:

Command: 1e.

Reply: 01Enable

enable enables the ability to shunt.

fan (f.)

Full Syntax: <addr>fan[.<level>]

Minimum Syntax: <addr>f.[<level>]

Broadcast Command: Yes

Example:

Command: 1f.4

Reply: 01F 4

fan will force a minimum fan level. Normally, the fan is only controlled by the temperature. The <level> must be 0 to 9. A fan <level> of 1 or more will force the fan to run. Fan <level> 0 is the default automatic mode (controlled by the temperature.)

gethighv (g.)

Full Syntax: <addr>gethighv

Minimum Syntax: <addr>g.

Broadcast Command: No

Example:

Command: 01g.

Reply: 01G 3.792V

gethighv gives the high voltage set point. There is only one high set point per regulator, so all bus addresses on one regulator will give the same response.

hmaclear (hma.)

Full Syntax: <addr>hmaclear

Minimum Syntax: <addr>hm.

Broadcast Command: Yes

Example:

Command: 1hma.

Reply:

hmaclear will clear the history for the maximum sensed voltage for the given bus address.

hmiclear (hmi.)

Full Syntax: <addr>hmiclear

Minimum Syntax: <addr>hmi.

Broadcast Command: Yes

Example:

Command: 1hmi.

Reply:

hmiclear will clear the history for the minimum sensed voltage for the given bus address.

hstclear (h.)

Full Syntax: <addr>hstclear

Minimum Syntax: <addr>h.

Broadcast Command: Yes

Example:

Command: 1h.

Reply:

hstclear will clear the history for the minimum and maximum sensed voltages for the given bus address.

lights (l.)

Full Syntax: <addr>lights

Minimum Syntax: <addr>l.

Broadcast Command: No

This command is handy for visually locating regs as it will make the unit's lights flash.

NOTE: Only use this command to talk to one individual regulator at a time. Do not use as a broadcast command (ie: 99) if there is more than one Mk3x4SMT regulator in the system. Additionally, do not use this command if there are any standard Mk3x4 four channel regulators in the system.

Example:

Command: 1l.

Reply:

--Rudman MK3x4SMT Regulator

--V0.17 Unit:01 S/N: 00001

lights will flash the lights on the regulator that contains the bus address, and reply with the sign on message.

maxvolts (m.)

Full Syntax: <addr>maxvolts

Minimum Syntax: <addr>m.

Broadcast Command: No

Example:

Command: 1ma.

Reply: 01MA 1.524V

maxvolts will reply with the maximum sensed voltage for the given bus address.

minvolts (mi.)

Full Syntax: <addr>minvolts

Minimum Syntax: <addr>mi.

Broadcast Command: No

Example:

Command: 1mi.

Reply: 01MI 1.510V

minvolts will reply with the minimum sensed voltage for the given bus address.

*** numchan (n.)**

This command is not available on production units.

Full Syntax: <addr>numchan[.<channels>]

Minimum Syntax: <addr>n.[<channels>]

Broadcast Command: Yes

Example:

Command: 1n.6

Reply: Unit:01-06

Numchan is used to artificially limit the number of bus addresses per regulator.

querytot (q.)

Full Syntax: <addr>querytot

Minimum Syntax: <addr>q.

Broadcast Command: No

Example:

Command: 1q.

Reply: 01Q 12.19V

querytot will reply with the total current sensed voltage for the regulator containing the given bus address.

readlowv (r.)

Full Syntax: <addr>readlowv

Minimum Syntax: <addr>r.

Broadcast Command: No

Example:

Command: 01r.

Reply: 01R 2.496V

readlowv gives the low voltage set point. There is only one low set point per regulator, so all bus addresses on one regulator will give the same response.

sethigh (se.)

Full Syntax: <addr>sethigh[.<voltage>]

Minimum Syntax: <addr>se.[<voltage>]

Broadcast Command: Yes

Example:

Command: 01seth.3.792

Reply: 01H 3.792V

sethigh sets the high voltage set point. There is only one high set point per regulator, so all bus addresses on one regulator are affected by the command. <voltage> must be from 0.000 to 9.999 and must contain exactly four digits. If <voltage> is not present, <addr>sethigh is the same as <addr>gethighv.

setlow (setl.)

Full Syntax: <addr>setlow[.<voltage>]

Minimum Syntax: <addr>setl.[<voltage>]

Broadcast Command: Yes

Example:

Command: 01setl.2.496

Reply: 01L 2.496V

setlow sets the low voltage set point. There is only one low set point per regulator, so all bus addresses on one regulator are affected by the command. <voltage> must be from 0.000 to 9.999 and must contain exactly four digits. If <voltage> is not present,

<addr>setlow is the same as <addr>readlowv.

setover (seto.)

Full Syntax: <addr>setover[.<voltage>]

Minimum Syntax: <addr>seto.[<voltage>]

Broadcast Command: Yes

Example:

Command: 01seto.3.984

Reply: 01O 3.984V

setover sets the over voltage set point. There is only one over voltage set point per regulator, so all bus addresses on one regulator are affected by the command.

<voltage> must be from 0.000 to 9.999 and must contain exactly four digits. If

<voltage> is not present, <addr>setover reports the current set point.

If any bus address exceeds the over voltage set point, the shunt is turned on.

status (s.)

Full Syntax: <addr>status

Minimum Syntax: <addr>s.

Broadcast Command: No

Example:

Command: 1s.

Reply: 01S 28

Status gives the current status of the given bus address as two hexadecimal digits.

| Bit | First digit | Meaning |
|-----|-------------|---------|
|-----|-------------|---------|

| | | |
|------|----------|-----------------------|
| 0x80 | 89ABCDEF | The shunt is disabled |
|------|----------|-----------------------|

| | | |
|------|----------|---|
| 0x40 | 4567CDEF | The shunt is enabled and the bus address is above the high voltage set point. |
|------|----------|---|

| | | |
|------|----------|--|
| 0x20 | 2367ABEF | The bus address is below the low voltage set point |
|------|----------|--|

| | | |
|------|----------|---|
| 0x10 | 13579BDF | The bus address is above the high voltage set point |
|------|----------|---|

Also, bit 0x08, which is a second digit of 8, means the bus address has been below the low voltage set point.

temperat (t.)

Full Syntax: <addr>temperat

Minimum Syntax: <addr>t.

Broadcast Command: No

Example:

Command: 1t.

Reply: 01T 064F

temperat gives the current temperature of the heat sink. There is only one heat sink temperature per regulator, so all bus addresses on one regulator will give the same response.

tempshot (tempsh.)

Full Syntax: <addr>tempshot.<temp>

Minimum Syntax: <addr>tempsh.<temp>

Broadcast Command: Yes

Example:

Command: 1tempsh.151

Reply: 01TH 151F

tempshot sets the temperature that runs the fan at full speed. The fan speed scales up from tempwarm to tempshot. <temp> must be from 32 to 181 and between tempwarm and tempoff.

tempoff (tempo.)

Full Syntax: <addr>tempoff.<temp>

Minimum Syntax: <addr>tempo.<temp>

Broadcast Command: Yes

Example:

Command: 1tempo.171

Reply: 01TO 171F

tempoff sets the temperature that forces the regulator off. <temp> must be from 32 to 181 and greater than tempshot.

tempwarm (tempw.)

Full Syntax: <addr>tempwarm.<temp>

Minimum Syntax: <addr>tempw.<temp>

Broadcast Command: Yes

Example:

Command: 1tempw.120

Reply: 01TW 120F

tempwarm sets the temperature to start the fan. The fan speed scales up from tempwarm to tempshot. tempwarm must be from 32 to 181 and less than tempshot.

watchdog (w.)

This command is not available on production units.

Full Syntax: <addr>watchdog[.<flags>]

Minimum Syntax: <addr>w.[<flags>]

Broadcast Command: Yes

Example:

Command: 1w.0

Reply: Unit:01 W0r

watchdog controls the watchdog timer. <flags> may contain 0 or 1 to disable or enable the watchdog. <flags> may contain r or t to reset or test the watchdog timer. If the watchdog is enabled, test mode will cause a reset.

xtrntemp (x.)

Full Syntax: <addr>xtrntemp

Minimum Syntax: <addr>x.

Broadcast Command: No

Example:

Command: 1x.

Reply: 01X Cold

xtrntemp gives the current temperature of the external temperature sensor. There is only one external temperature sensor per regulator, so all bus addresses on one regulator will give the same response.

NOTICE! Ensure that the REGBUS data cable is fully plugged into the charger whenever the vehicle is charging. The communication data cables are hooked to the regulators in a daisy chain fashion. Make sure that each of the smaller data cables are all plugged in where they should be before charging. If there is an unplugged portion of the REGBUS, the charger cannot communicate with the regs and this could lead to potentially damaging situation if there is an un-matched battery cell in the pack! The RJ connectors are similar to phone cord connectors and they are designed to snap into place and stay connected. If a cable is disconnected insure that it is fully reconnected. An audible *click* should be heard when the RJ plug is fully inserted and it should not be able to be pulled out without first pinching the small plastic tab underneath the plug.

For more information visit: www.manzanitamicro.com

Or for technical questions or other inquiries:

Manzanita Micro

Rich Rudman

PO Box 1774

Kingston, WA 98346

Phone: 360-297-1660